



Non Load Bearing Slab

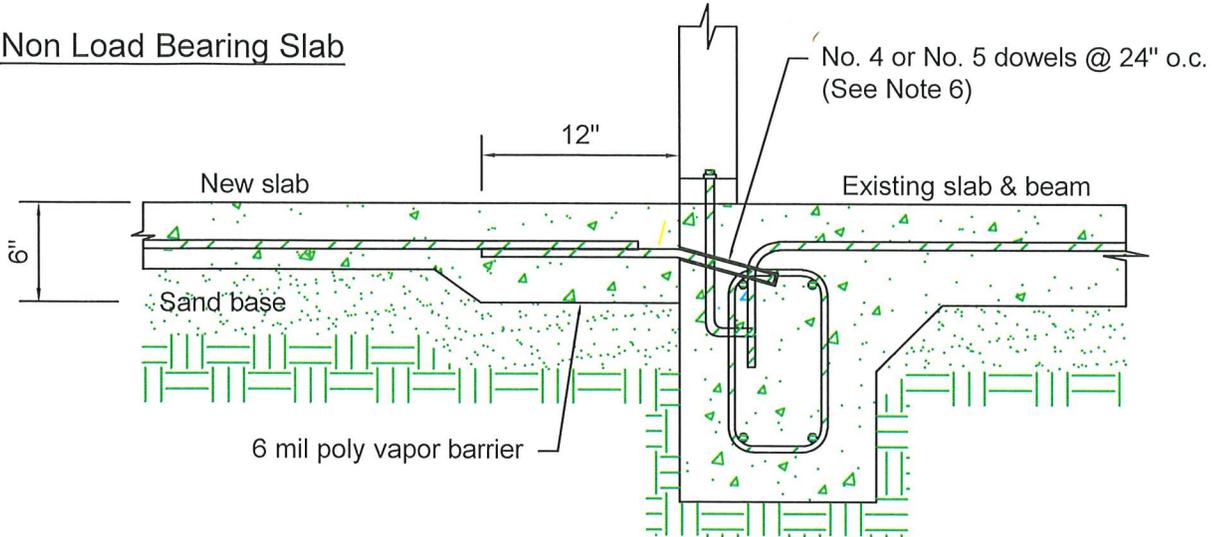

New Slab Bearing a Wall

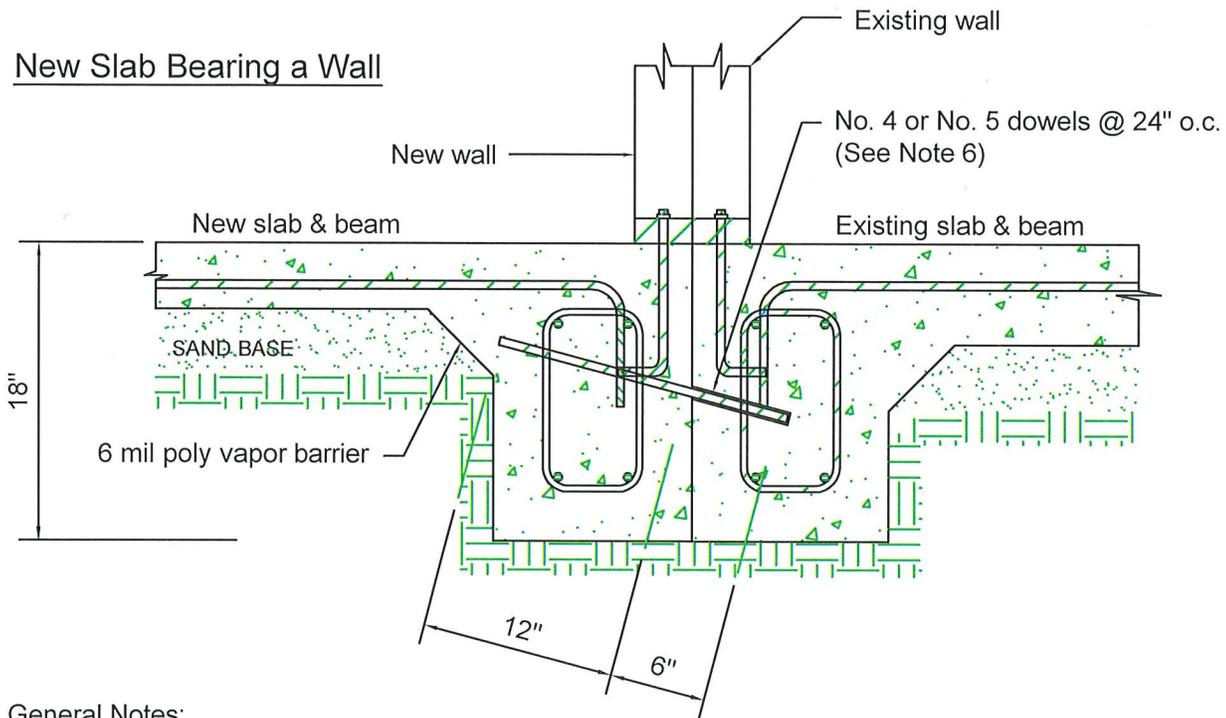

General Notes:

1. Clean holes with oil free, moisture free compressed air.
2. Holes and dowels shall be dry and free of dust, dirt, grease, oil or any other foreign contaminants.
3. Allow epoxy to harden before placing concrete.
4. Place bars a minimum of 2" from exposed surfaces.
5. Use # 4 or # 5 dowels @ 24" o.c.
6. Hole depth and diameter are as per the epoxy manufacturer's recommendations (otherwise 6" deep and 1/4" larger than bar diameter).



STANDARD DRAWING

**CITY OF HOUSTON**  
HOUSTON PUBLIC WORKS  
BUILDING CODE ENFORCEMENT

RESIDENTIAL CONCRETE BONDING  
DETAIL

1002 WASHINGTON AVE., HOUSTON, TEXAS 77002

APPROVED BY:

BUILDING OFFICIAL

DATE:  
5/30/2024

DWG No:  
24-08-R

1 of 1